


Proper Placement of Ink Lines

FOR THE FAST T-JET2 SDT-1200

1. Attach the Center Ink Line Holder


The center ink line holder should be placed approximately 3 ³/₄" from the carriage opening in the framework, as seen in photo. If your machine has the yellow placement sticker, use it as a guide.

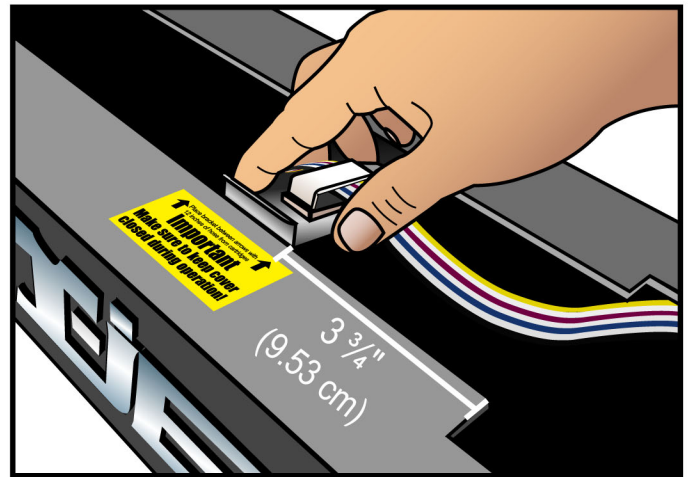

2. Measure Distance on Left

The ink lines need to have slack but not too much slack. Move the carriage to the far left and use your finger to test the amount of slack left in the ink lines. If it is too loose, it could get caught on the carriage while printing. Measure the distance from the arc of the lines (on left) to where the lines enter the center clip. This measurement should be approximately 14 " (35.5 cm). Lock the center clip.


Print Head in the Far Left Position

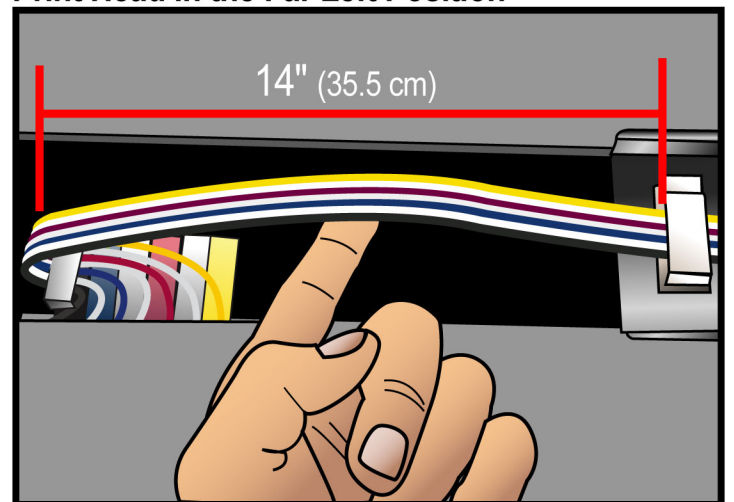

3. Measure Distance on Right

With the line locked in place (center clip) measure the distance from where the line exits the center clip to where it enters the clip on the far right. This measurement should be approximately 11 " (28 cm). Lock the clip on the far right.

Print Head in the Far Right Position (home)

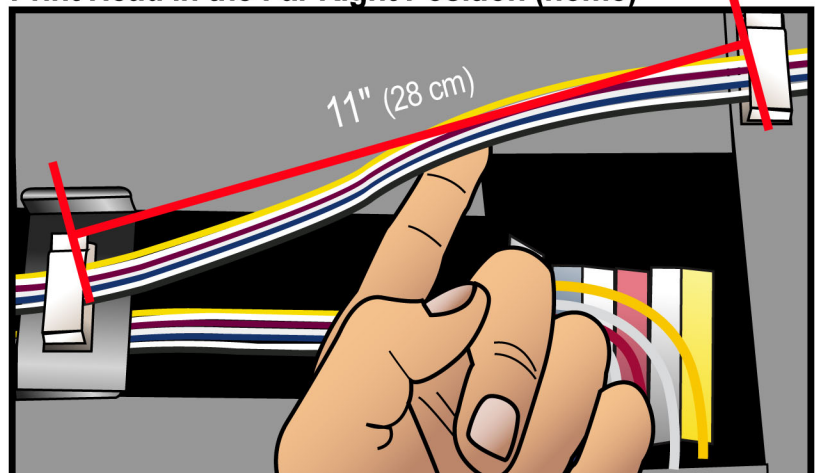

NOTE: Make it a good habit to check your ink hose frequently to make sure they have not slipped.